



19770 Bahama St.
Northridge, CA. 91324
V: 818.898.3380
F: 818.898.3360
sales@dnfcontrols.com
www.dnfcontrols.com

CP30 USER MANUAL

User Manual
Rev. 1.00

Table of Contents

Revision History	2
1. Installation	3
Connection Diagram	3
2. IP Configuration	5
A. IP Address Setup	5
B. Subnet Mask Setup	5
C. Gateway Address Setup	5
3. Initial Setup	6
A. Set Password	7
B. Set System Time	8
C. Set System Label	9
D. USP Key Server Setup	10
E. Channel Assignment	11
F. Additional Setups	12
G. System maintenance	13
H. Software Upgrade	13
4. Setup menu	17
5. VTR mode	21
A. Play	21
B. Recue	21
C. Mark a Cue point	21
D. Set IN and OUT points	21
E. Load a Cue Point	21
F. Recue	21
6. CLIP mode	22
A. Load a clip	22
B. Play a clip	22
C. Recue	22
D. Mark a Cue point	22
E. Set IN and OUT points	23
F. Load a Cue Point	23
G. Recue	23
H. Create a clip	24
7. Function Table	25
8. Specifications	26
9. Keyboard layout	27
DNF Controls Limited Warranty	28

Revision History

083117 1.00 Original document.

Document name..... CP30_User_Manual.doc


1. Installation

CAUTION

Do NOT apply AC voltage to the power supply, before connecting the power supply to CP30 CONTROL PANEL. Component damage may occur.

1. Connect a Cat 5 cable to CP30 CONTROL PANEL connector labeled "E-NET #1". Connect other end of the Cat 5 cable to customer supplied Ethernet hub.
2. Connect power supply DB9 female connector to the CP30 CONTROL PANEL connector labeled "POWER".
3. Connect female side of AC power cable to the supplied power supply.
4. Connect male side of AC power cable to 100 – 240VAC.
5. Push the CONTROL PANEL power switch, located on rear panel, to ON position. "O" on the power switch is the OFF position.
6. When power up and system initialization completes, the front panel display will show the default CP30 home screen. Allow 25 seconds for power up and system initialization to complete.
7. OPTIONAL: Connect PC Keyboard to CP30 CONTROL PANEL connector labeled "USB".

Connection Diagram

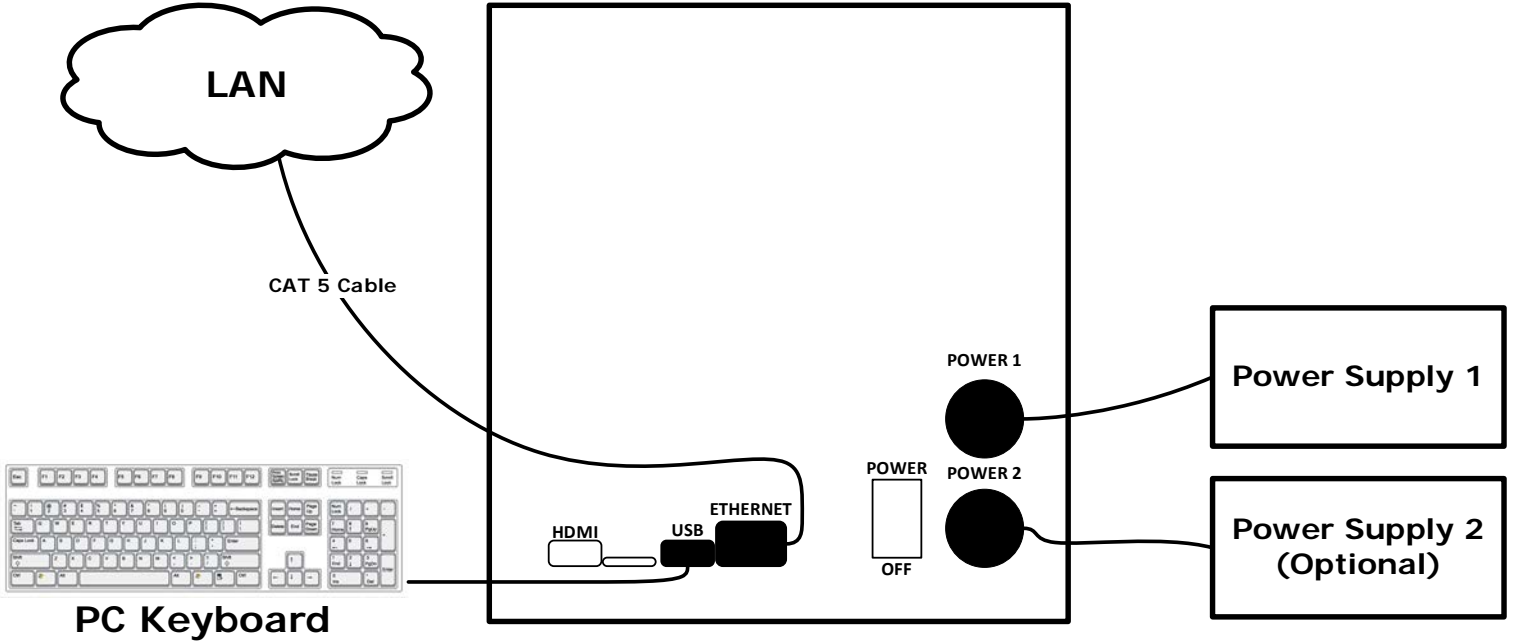

2. IP Configuration

IP Configuration is required after initial installation.

A. IP Address Setup

1. On the CP30 home screen, press **{MENU}** to enter the setup menu.
2. Press **{NETWORK SETTINGS}** to enter the network settings menu. Display will show current IP address.
3. Press **{IP ADDRESS}** to edit the current IP address.
4. Using the numeric keypad, enter the desired IP address for the CP30.
5. Press **{SAVE & REBOOT}** to save new IP address.

OR

Press **{BACK}** or **{EXIT}** to exit without saving.

NOTE- New IP Address will take effect on next power up.

B. Subnet Mask Setup

1. On the CP30 home screen, press **{MENU}** to enter the setup menu.
2. Press **{NETWORK SETTINGS}** to enter the network settings menu. Display will show current subnet mask.
3. Press **{SUBNET MASK}** to edit the current subnet mask.
4. Using the numeric keypad, enter the desired subnet mask for the CP30.
5. Press **{SAVE & REBOOT}** to save new IP address.

OR

Press **{BACK}** or **{EXIT}** to exit without saving.

NOTE- New subnet mask will take effect on next power up.

C. Gateway Address Setup

1. On the CP30 home screen, press **{MENU}** to enter the setup menu.
2. Press **{NETWORK SETTINGS}** to enter the network settings menu. Display will show current subnet mask.
3. Press **{GATEWAY}** to edit the current gateway.
4. Using the numeric keypad, enter the desired IP address for the CP30.
5. Press **{SAVE & REBOOT}** to save new IP address.

OR

Press **{BACK}** or **{EXIT}** to exit without saving.


NOTE- New subnet mask will take effect on next power up.

3. Initial Setup

Setup is required after installation. This step may be performed at any other time, as required.

Setup is performed using a computer running an off-the-shelf web browser such as "Google Chrome", "Microsoft Internet Explorer" or "Firefox". Connect the CAT5 cable from the computer to the same Ethernet hub that the CP30 is connected to.

After launching the web browser, enter the IP address of the CP30 to be setup. The Home Page will be displayed.

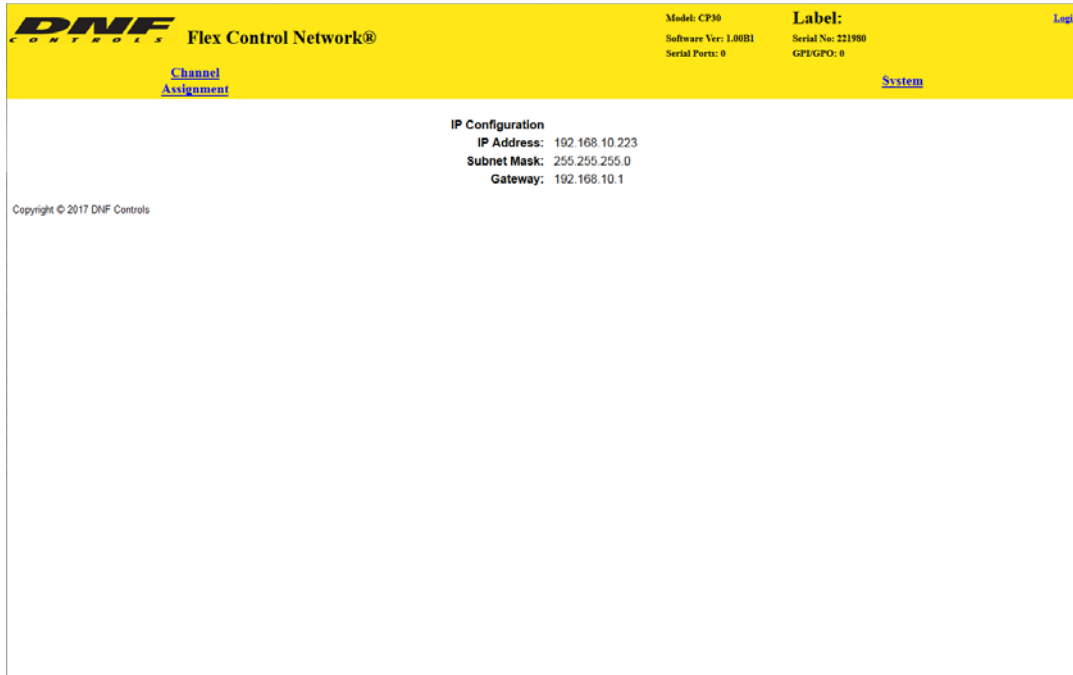


A. Password

The username and password that is used to access all configuration screens is:

Username: admin

Password: controls



NOT LOGGED IN!

Username admin

Password ●●●●●●●●

Login Cancel

B. Set System Time

The system time is only used for error and event time stamping.

Using the web browser-

- 1) From the Home Page, click on the "System" link. The System page will be displayed.
- 2) Click on "Set System Time". The Set System Time page will be displayed.

DNF Flex Control Network®

Model: CP30
Software Ver: 1.00B1
Serial Ports: 0

Label:
Serial No: 221990
GPUGPO: 0

Channel Assignment System

System Time: September 06, 2017 15:04:39 Wednesday

Set System Time

NTP Server IP	Connected Status	Time Request Rate (in seconds)	Last Time Response (in seconds)
0.0.0.0	n/a	n/a	n/a

Reboot required after NTP Server IP change!

UTC Offset
+0

Reboot required after UTC Offset change!

Year: 2017 | Month: September | Day: 06

Hour: 15 | Minutes: 04 | Seconds: 39

Save Refresh Back

Copyright © 2017 DNF Controls

- 3) Using the drop down menus, set the current date and time. If using an NTP server enter the IP address of the NTP server.
 - 4) Click on "Save" to save the entered date and time.
- OR
- Click on "Cancel" to exit without saving.

C. Set System Label

The System Label is used to uniquely identify a CP30. This name is associated with the IP address.

Using the web browser-

- 1) From the Home Page, click on the "System" link. The System page will be displayed.
- 2) Click on "Set System Label". The Set System Label page will be displayed.

DNF
CONTROLS Flex Control Network®

Model: CP30
Software Ver: 1.00B1
Serial Part: 0

Label:
Serial No: 221980
GPLAGPO: 0

[Channel Assignment](#) [System](#)

Set System Label

- Label may contain any alpha, numeric, or special characters
- Max length of label is 32 characters.

System Label: Enter Label:

Save

Refresh Back

Copyright © 2017 DNF Controls

- 3) Enter any name made up of letters, numbers, or special characters, up to 32 characters.
- 4) Click on "Save" to save the entered name.
OR
Click on "Cancel" to exiting without changing the System Label.

D. USP Key Server Setup

The USP/USP3-Keyserver is designed to be controlled by a CP30 or any 3rd party. Its Keyserver Control Protocol provides complete control over the Universal Switch Panel configuration and operation. The USP is configured as the server and the CP30 is configured as the client.

Using the web browser-

- 1) From the Home Page, click on the "System" link. The System page will be displayed.
- 2) Click on "USP Key Server Setup". The USP Key Server page will be displayed.

The screenshot shows the DNF Flex Control Network web interface. The header includes the DNF logo, "Flex Control Network®", and system information: Model: CP30, Software Ver: 1.00B1, Serial Ports: 0, Label: Serial No: 221990, GPI/GPO: 0, and a Login link. The main content area is titled "USP Extension Panel Configuration" and contains the following instructions:

- Set the IP Address and Port for USP Extension Panels
- Connections to removed USP will be dropped immediately after saving
- Connection will be attempted to all items that do not have Port = 0
- Do not leave unavailable items on the list, set them to 0.0.0.0, Port 0

Below the instructions is a table with the following data:

USP#	IP Address	Port	Status
1	0.0.0.0	0	Not Connected
2	0.0.0.0	0	Not Connected
3	0.0.0.0	0	Not Connected
4	0.0.0.0	0	Not Connected

Below the table are three buttons: "Save", "Refresh", and "Back". The footer of the page reads "Copyright © 2017 DNF Controls".

- 3) Enter the IP address and port number of the USP to the current system.
 - 4) Click on "Save" to save the entered DNF port number.
- OR
- Click on "Back" to exit without saving.

E. Channel Assignment

The Channel Assignment Table Setup is performed using a computer running an off-the-shelf web browser such as "Google Chrome", "Microsoft Internet Explorer" or "Firefox". Connect the CAT5 cable from the computer to the same Ethernet hub that the CP30 is connected to.

After launching the web browser, enter the IP address of the CP30 to be setup. The Home Page will be displayed.

Using the web browser-

- 1) Click on the "Channel Assignment" link at the top of the page. The Channel Assignment Table will be displayed.

Channel Assignment Table

Local Channel	Remote IP Address	Remote Channel	Control Function	Registration Status	Connection Status
1	192.168.10.212	1	Clip Control	----	Connected
2	192.168.10.212	2	Basic Control	----	Connected
3	192.168.10.212	3	Basic Control	----	Connected
4	192.168.10.212	4	Basic Control	----	Connected
5	0.0.0.0	0	----	----	----
6	192.168.10.56	2	Basic Control	----	Connected
7	192.168.10.56	3	Basic Control	----	Connected
8	192.168.10.56	4	Basic Control	----	Connected
9	0.0.0.0	0	----	----	----
10	0.0.0.0	0	----	----	----
11	0.0.0.0	0	----	----	----
12	0.0.0.0	0	----	----	----
13	0.0.0.0	0	----	----	----
14	0.0.0.0	0	----	----	----
15	0.0.0.0	0	----	----	----
16	0.0.0.0	0	----	----	----
17	0.0.0.0	0	----	----	----
18	0.0.0.0	0	----	----	----
19	0.0.0.0	0	----	----	----
20	0.0.0.0	0	----	----	----
21	0.0.0.0	0	----	----	----
22	192.168.10.56	1	Basic Control	----	Connected
23	192.168.10.56	2	Basic Control	----	Connected
24	192.168.10.56	3	Basic Control	----	Connected
25	192.168.10.56	4	Basic Control	----	Connected
26	0.0.0.0	0	----	----	----
27	0.0.0.0	0	----	----	----
28	0.0.0.0	0	----	----	----
29	0.0.0.0	0	----	----	----
30	0.0.0.0	0	----	----	----
31	0.0.0.0	0	----	----	----
32	0.0.0.0	0	----	----	----

- 2) Click in the Remote IP address field and enter the IP address of the DC20 device controller. Click in the Remote Channel field and enter the remote channel to be connected.

Local Channel	Remote IP Address	Remote Channel	Control Function	Registration Status	Connection Status
1	192.168.10.212	1	Clip Control	----	Connected
2	192.168.10.212	2	Basic Control	----	Connected

- 3) Repeat the previous step for each VTR channel.
- 4) Click on "Save" to save the entered data.
OR
Click on "Back" to exit without saving.

F. Additional Setups

No additional setups are required in "System Maintenance" for normal operation.


G. System maintenance

View event logs


The default password, when shipped from the factory, is "controls", all lower case. The password is used to access all configuration screens.

Using the web browser-

- 1) From the Home Page, click on the "System" link. The System page will be displayed.
- 2) Click on "System Maintenance" Link, the System Maintenance page will be displayed.

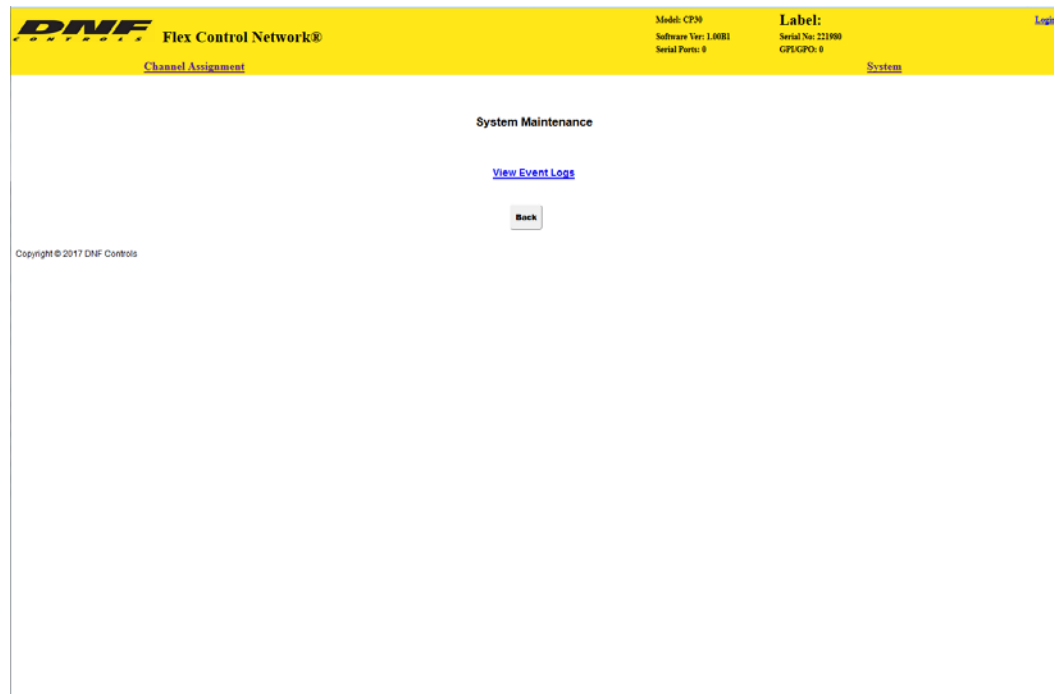

- 3) Click on "View Event Logs" Link, the Event Logs File List page will be displayed.

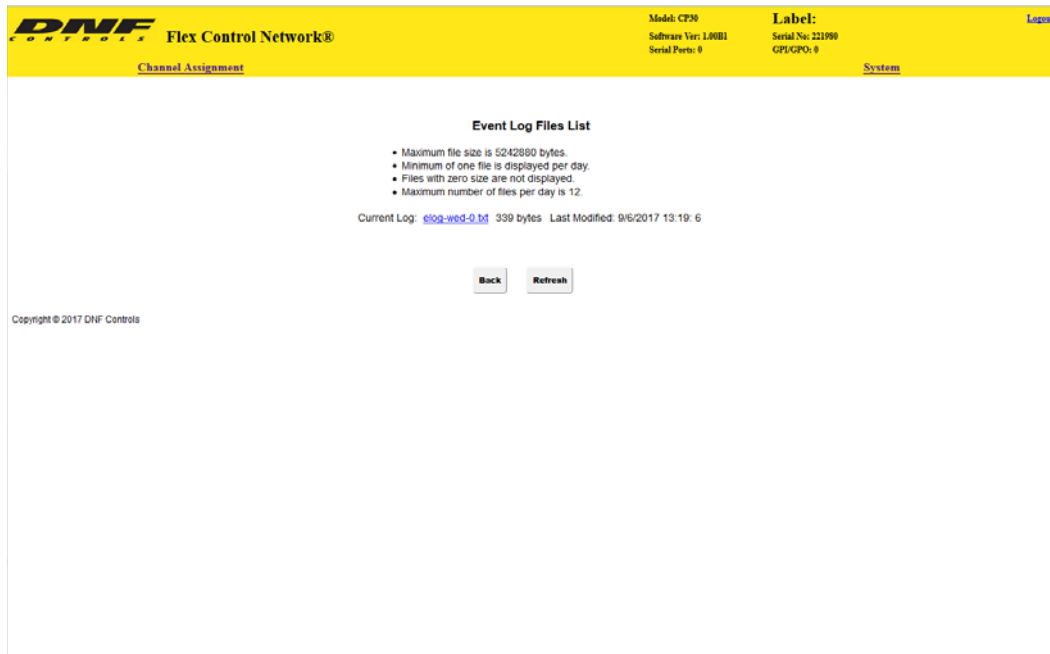


- 4) Click on a radio button to select the Event File to view. Then click on the "View Log" button to display the file.
- 5) Right click on the file name to "Save As" the file to the PC. The file will be saved as a standard "CSV" (coma separated value) format.
- 6) Click on the Back button to exit the page.

H. Software Upgrade

The default password, when shipped from the factory, is "controls", all lower case. The password is used to access all configuration screens.

Using the web browser-

- 7) From the Home Page, click on the "System" link. The System page will be displayed.
- 8) Click on "Software Upgrade" Link, the Software Upgrade page will be displayed.

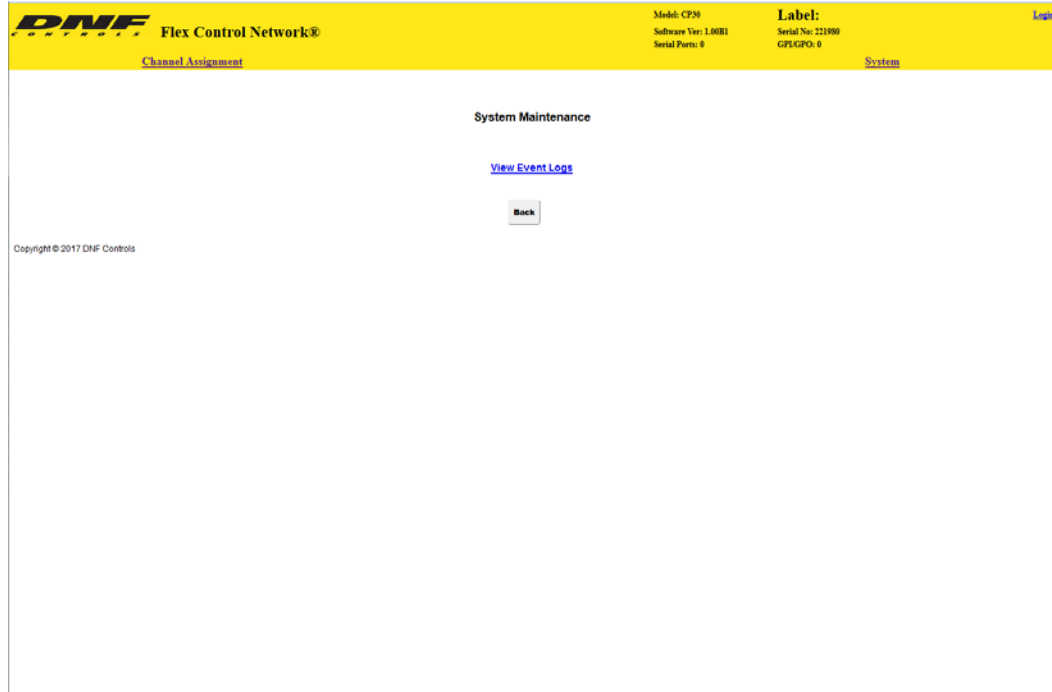

- 9) Click on "Upload Software file" Link, the System Maintenance page will be displayed.
- 10) Click on the "Browse" button to select the TAR file for the software upgrade. After a TAR file has been selected, click on the "Upload Software Tar File"

Select local software tar file to upload: (click on browse)

All other tar files in directory will be deleted.


No file selected.

- 11) After the TAR files has finished uploading. Power cycle the CP30 to complete the upgrade procedure.

4. Setup Menu.

Press the **{MENU}** key to select the setup item. Then press a **{Softkey}** to choose the option or use the Keypad to enter a value.

VERSION NUMBER	Displays model number and Software version number.
DEFAULTS:	<p>Press {DEFAULTS} to set factory defaults.</p> <p>Press {YES} to set factory defaults. Press {NO} to exit to the System Menu.</p>
EXIT:	Press {EXIT} to exit the System Menu.

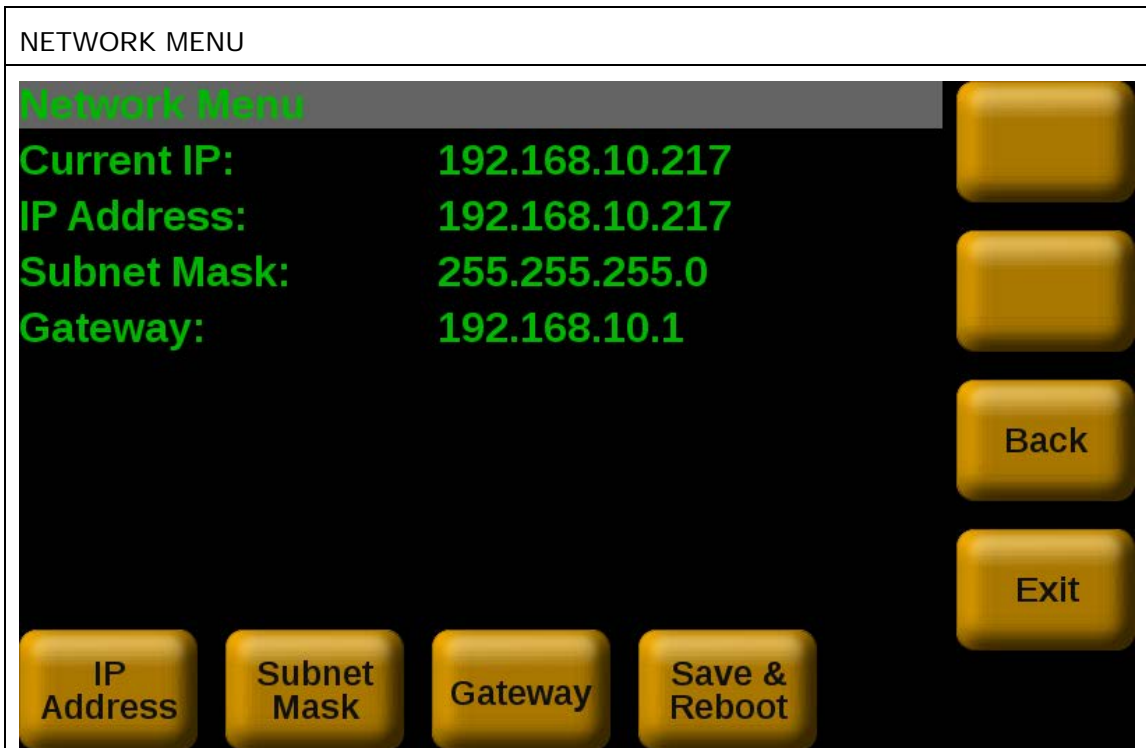

IP ADDRESS:	View current IP Address. Press softkey to change the displayed address. Use keypad to enter new address. The system must be rebooted for the new setting to take effect.
SUBNET MASK:	View current Subnet Mask. Press softkey to change the displayed mask address. Use keypad to enter new address. The system must be rebooted for the new setting to take effect.
GATEWAY:	View current Gateway. Press softkey to change the displayed gateway address. Use keypad to enter new address. The system must be rebooted for the new setting to take effect.
SAVE AND REBOOT:	Press {SAVE & REBOOT} to save the made changes and immediately reboot the CP30.
BACK:	Press {BACK} to exit to the System Menu.
EXIT:	Press {EXIT} to exit the System Menu.

CHANNEL ASSIGN

Assign Channels to Keys:

Key 1: Ch 1	1	9	17	25	
Key 2: Ch 2	2	10	18	26	
Key 3: Ch 3	3	11	19	27	
Key 4: Ch 4	4	12	20	28	
Key 5: Ch 5	5	13	21	29	
Key 6: Ch 6	6	14	22	30	
Key 7: Ch 7	7	15	23	31	
Key 8: Ch 8	8	16	24	32	

ASSIGN CHANNELS TO KEYS:	<p>Select channel</p> <p>Press softkey {1} thru {32} to assign a channel to the selected key.</p> <p>Repeat for remaining channels.</p>
SAVE:	<p>Press {SAVE & REBOOT} to save the made changes and immediately reboot the CP30.</p>
BACK:	<p>Press {BACK} to exit to the System Menu.</p>
EXIT:	<p>Press {EXIT} to exit the System Menu.</p>



TIME MODE:	<p>Select channel</p> <p>Press {TOGGLE} to set time mode.</p> <p>TM: Display elapsed time from first frame (always 00:00:00:00) of video.</p> <p>TC: Display Timecode.</p> <p>VT: Display vertical interval time code data</p>
WIND MODE:	<p>{LATCH}: The fast wind button function will remain active until another motion button is pressed.</p> <p>{HOLD}: The fast wind button function will cease as soon as the fast wind button is released.</p>
WIND SPEED:	<p>{X4}: Press softkey to set to 4X wind speed.</p> <p>{X10}: Press softkey to set to 10X wind speed.</p> <p>{X24}: Press softkey to set to 24X wind speed.</p> <p>{MAX}: Press softkey to set the maximum fast wind speed.</p>
RECORD MODE:	<p>{LOCKOUT}: Record function is disabled.</p> <p>{CRASH}: Record function will use CRASH MODE for recording.</p> <p>{ASSEMBLE}: Record function will use ASSEMBLE MODE for recording (not available on all protocols).</p>
BACK:	Press {BACK} to exit to the System Menu.
EXIT:	Press {EXIT} to exit the System Menu.

5. VTR mode

NOTE: TAPE MUST BE LOADED MANUALLY ON THE VTR.

A. Play

- 1) OPTIONAL:
 - a. Set an IN Point and OUT Point.
 - b. Jog/Shuttle to the desired IN point. Press **{MARK IN}**.
 - c. Jog/Shuttle to the desired OUT point. Press **{MARK OUT}**.
- 2) Press **[PLAY]**. The tape will play from its current time to the OUT point, and then stop. If OUT point is not set then it will play to end of TAPE.

B. Recue

Press **[GOTO]**. The tape will cue to the IN point. If no in point is entered: will do nothing.

C. Mark a Cue point

NOTE: TAPE MUST BE LOADED MANUALLY ON THE VTR.

- 1) Press VTR [1], [2], [3], [4], [5], [6], [7] or [8].
- 2) OPTIONAL
 - a. Use the transport functions to view the clip.
 - b. Press **{MARK IN}** to set an IN point.
 - c. Press **{MARK OUT}** to set an OUT point.
 - d. If no IN point is set, the current location of the clip will be SET as the IN point.
- 3) Select the desired Cue Point by pressing **{NEXT}**, **{LAST}**.
The selected Cue Point number is shown on the bottom part of the LCD display.
- 4) Press **[MARK]** to create the Cue point.
NOTE: MARK will overwrite the previous contents of the Cue Point.
- 5) Press **[ESC]** at anytime to escape without MARKing.

D. Set IN and OUT points

- 1) Set an IN Point and/or OUT Point.
Jog/Shuttle to the desired IN Point. Press **{MARK IN}**.
Jog/Shuttle to the desired OUT Point. Press **{MARK OUT}**.
- 2) Press **{MARK IN}** to set an IN point. The IN field on the LCD screen will update with the IN point time.
Optional- Press **{MARK OUT}** to set an OUT point. The OUT field on LCD screen will update with the OUT point time.

E. Load a Cue Point

- 1) Press **{NEXT}** or **{LAST}** key and press [ENTER] on the keypad
- 2) Press the **[LOAD]** key. The VTR will be cued to the set in point.


F. Recue

Press **[GOTO]**. If an IN Point is set (the IN indicator is on), the VTR will RECUE to the IN Point. If no IN point is set then do nothing.

6. CLIP mode

A. Load a clip

- 1) Select a VTR by pressing VTR [1], [2], [3], [4], [5], [6], [7] or [8].
- 2) Press **{CLIP LIST}** to view the list of CLIP IDs that are resident on the Video Server.
- 3) If no clips are present press the **{REBUILD}** key to rebuild the clip database.

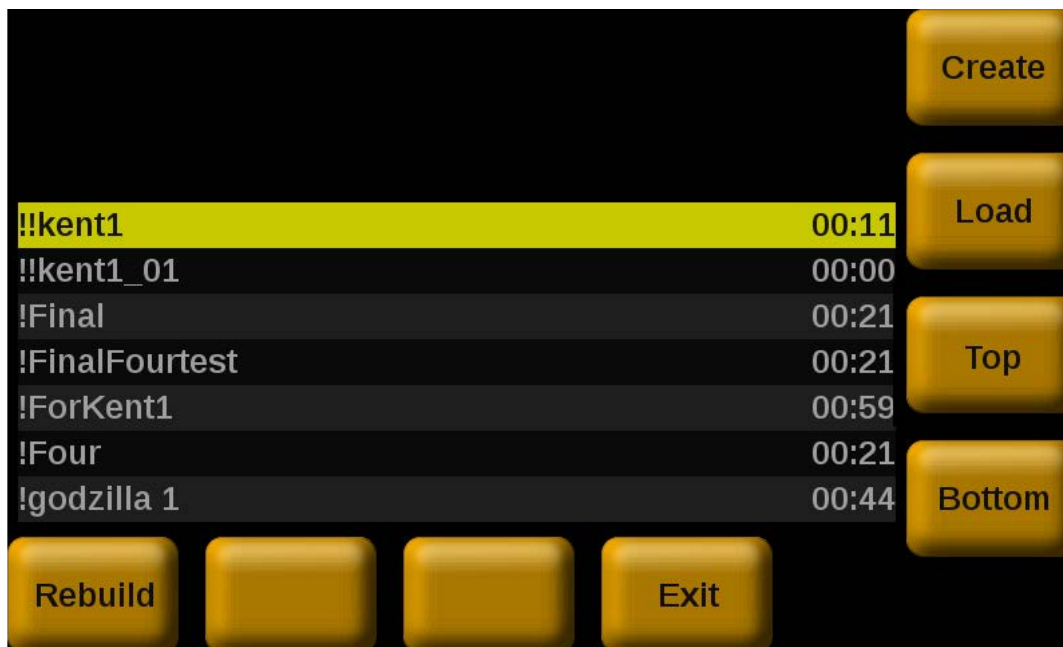

- 4) Turn the Wheel clockwise to scroll forward, or counter-clockwise to scroll backward, through the list of available CLIPs. Press the **{TOP}** to scroll to the top of the clip list. Press the **{BOTTOM}** to scroll to the bottom of the clip list.
- 5) Press **{LOAD}** to load the entered CLIP ID for payout.
- 6) Repeat steps 1) thru 3) to load clips on other channels.

B. Play a clip

- 1) OPTIONAL:
 - a. Set an IN Point and OUT Point.
 - b. Jog/Shuttle to the desired IN point. Press [IN].
 - c. Jog/Shuttle to the desired OUT point. Press [OUT].
- 2) Press **{PLAY}**, the clip will play from its current position to the out point, and then stop. If out point is not set, then play to the end of the clip.

C. Recue

Press **[GOTO]**. The clip will cue to the IN point. If no IN point is set then cue to beginning of clip.

D. Mark a Cue point

- 1) Press channel key [1], [2], [3], [4], [5], [6], [7] or [8].
- 2) Load a clip on the selected channel. See section LOAD A CLIP.
- 3) OPTIONAL:
 - a. Use the transport functions to view the clip.

- b. Press **{MARK IN}** to set an IN point. The IN field on the LCD screen will update with the IN point time. On recall, the clip will cue to the IN time, not the beginning of the clip.
 - c. Press **{MARK OUT}** to set an OUT point. The OUT field on LCD screen will update with the OUT point time. On recall, the clip will play to the OUT point then stop.
- 4) Select the desired Cue Point by pressing **{NEXT}**, **{LAST}** followed by [ENTER].
The selected Cue Point number is shown on the bottom part of the display.
- 5) Press **{MARK}** to create the Cue point.
- 6) Press [ESC] at any time to escape without MARKing.

E. Set IN and OUT points

- 1) Set an IN Point and/or OUT Point.
Jog/Shuttle to the desired IN Point. Press **{MARK IN}**.
Jog/Shuttle to the desired OUT Point. Press **{MARK OUT}**.
- 2) Press **{MARK IN}** to set an IN point. The IN field on the LCD screen will update with the IN point time. On recall, the clip will cue to the IN time, not the beginning of the clip.
- 3) Optional- Press **{MARK OUT}** to set an OUT point. The OUT field on LCD screen will update with the OUT point time. On recall, the clip will play to the OUT point then stop.

F. Load a Cue Point

- 1) Press **{NEXT}** or **{LAST}** key and press [ENTER] on the keypad
- 2) Press the **{LOAD}** key. The clip will be cued to the set in point.

G. Recue

Press [GOTO]. If an IN Point is set (the IN indicator is on), the clip will RECUE to the IN Point.

If the IN point is not set, the clip will RECUE to the start of the clip.

(Continued on next page)

H. Create a clip

- 1) Press **{CLIP LIST}**.
- 2) Press **{CREATE}**.



- 3) Manually enter an ID from the CP30 numeric keypad. Press **{A..a}** to switch between uppercase and lowercase letters.
OR
Manually enter an ID from a PC keyboard.
- 4) Press **{CREATE}**. The clip will be created and loaded. If the entered CLIP ID already exists, a warning message will be displayed.
- 5) Press **{Clip List}** to exit to the Clip list menu.
OR
- 6) Press **{EXIT}** to exit out of the Clip List menu.

7. Function Table

Function	Key Press	Description
CLIP LIST	{CLIP LIST}	Press the {CLIP LIST} key to access the clip list on the server.
FFWD	[FFWD]	Press and HOLD to shuttle. Release key to stop. Set WIND Speed in MENU.
GOTO IN POINT	[GOTO]	If IN point is set, cue to the IN point.
JOG	[JOG]	Select JOG mode and enable Wheel.
LAST CUE	[LAST]	Step to the previous Cue Point Location.
MENU	[MENU]	Press the [MENU] key to access the menu items.
NEXT CUE	[NEXT]	Step to the next Cue Point Location.
PLAY	[PLAY]	If an OUT point is set, play to the OUT point and stop. If not OUT point is set, play normally.
RECORD	[REC]	Places VTR into the Record mode.
RECUE	[GOTO]	If the IN point is set, cue to the IN point. If the IN point is not set then cue to beginning of clip.
REWIND	[RWD]	Press and HOLD to shuttle. Release key to stop. Set WIND Speed in MENU.
SET IN POINT	{MARK IN}	Press the {MARK IN} key to set the in point to the current position.
SET OUT POINT	{MARK OUT}	Press the {MARK OUT} key to set the out point to the current position.
SHUTTLE	[SHUT]	Select SHUTTLE mode and enable Wheel.
SLOW MOTION	[SLOMO]	Press the [SLOMO] key to start play at speed set by wheel. If slomo set to zero then still frame. Press any transport key to exit SLOMO.
STOP	[STOP]	Press once to STILL frame VTR. Press again to put VTR into STOP mode.

8. Specifications

Power: 90 VAC - 240 VAC power supply, supplied with IEC connector

Size: (H.W.D.) 7 1/4 in. X 7 1/2 in. X 9 1/2 in.

Weight: 7 lbs.

Front Panel Display: 7" LCD Touch Screen Display.

Front Panel Keyboard: 47 keys + Wheel.

Ethernet: RJ45 Connector

Micro SD: Micro SD Card


USB: USB "A" socket Connector

HDMI: HDMI Connector

Power Connector: 2-Pin Male (CPC Connector)

Pin #	Function
1	+15-28V
2	Not Connected
3	Ground
4	Not Connected

9. Keyboard layout

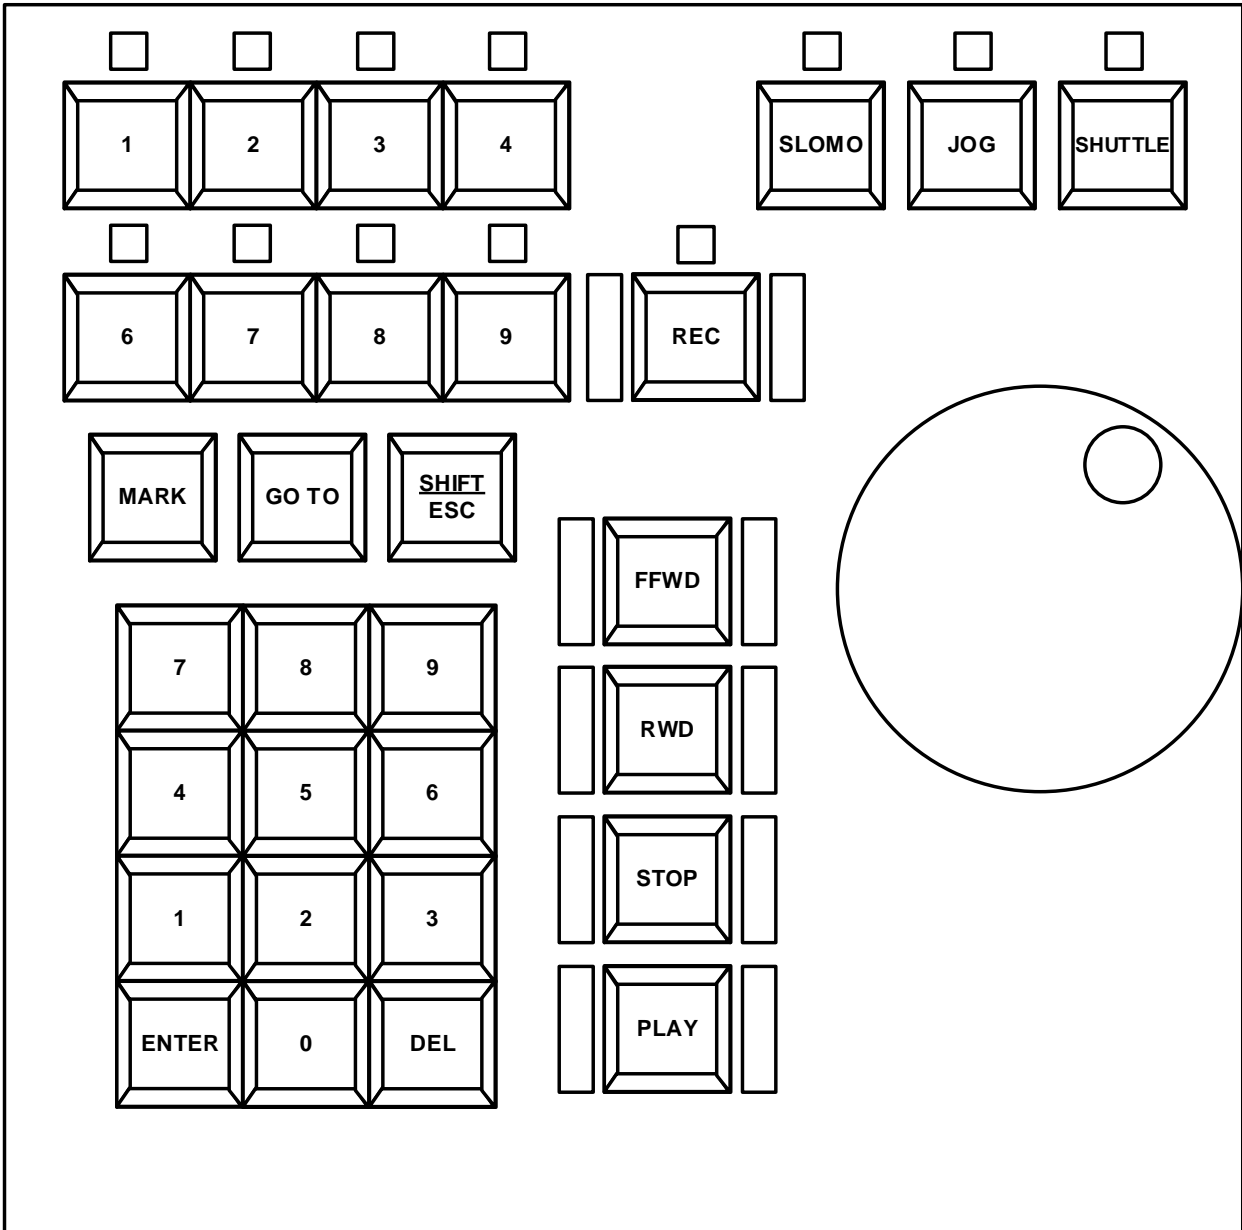

DNF Controls Limited Warranty

DNF Controls warrants its product to be free from defects in material and workmanship for a period of one (1) year from the date of sale to the original purchaser from DNF Controls.

In order to enforce the rights under this warranty, the customer must first contact DNF's Customer Support Department to afford the opportunity of identifying and fixing the problem without sending the unit in for repair. If DNF's Customer Support Department cannot fix the problem, the customer will be issued a Returned Merchandise Authorization number (RMA). The customer will then ship the defective product prepaid to DNF Controls with the RMA number clearly indicated on the customer's shipping document. The merchandise is to be shipped to:

DNF Controls
19770 Bahama St.
Northridge, CA 91324
USA

Failure to obtain a proper RMA number prior to returning the product may result in the return not being accepted, or in a charge for the required repair.

DNF Controls, at its option, will repair or replace the defective unit. DNF Controls will return the unit prepaid to the customer. The method of shipment is at the discretion of DNF Controls, principally UPS Ground for shipments within the United States of America. Shipments to international customers will be sent via air. Should a customer require the product to be returned in a more expeditious manner, the return shipment will be billed to their freight account.

This warranty will be considered null and void if accident, misuse, abuse, improper line voltage, fire, water, lightning, or other acts of God damaged the product. All repair parts are to be supplied by DNF Controls, either directly or through its authorized dealer network. Similarly, any repair work not performed by either DNF Controls or its authorized dealer may void the warranty.

After the warranty period has expired, DNF Controls offers repair services at prices listed in the DNF Controls Price List. DNF Controls reserves the right to refuse repair of any unit outside the warranty period that is deemed non-repairable.

DNF Controls shall not be liable for direct, indirect, incidental, consequential or other types of damage resulting from the use of the product.

#